



**Johnson
Screens**

A brand of
Aqseptence Group



JSL Rapid™ Spline Installation Instructions

1. Clean all the grooves and the beveled male surface.
2. Verify O-ring is seated correctly.
3. Lubricate the O-ring and bevel on the male end with an NSF approved lubricant.
4. Align slot on pipe with key in coupling and insert the male end fully into the coupling.
5. Install the spline into the spline opening keeping the tab offset outward, **Figure 2**.
6. When the spline is fully inserted, the tab will snap into the hole.



Note

- Improper O-ring lubrication, such as soapy water, may prevent a complete connection and cause O-ring failure.

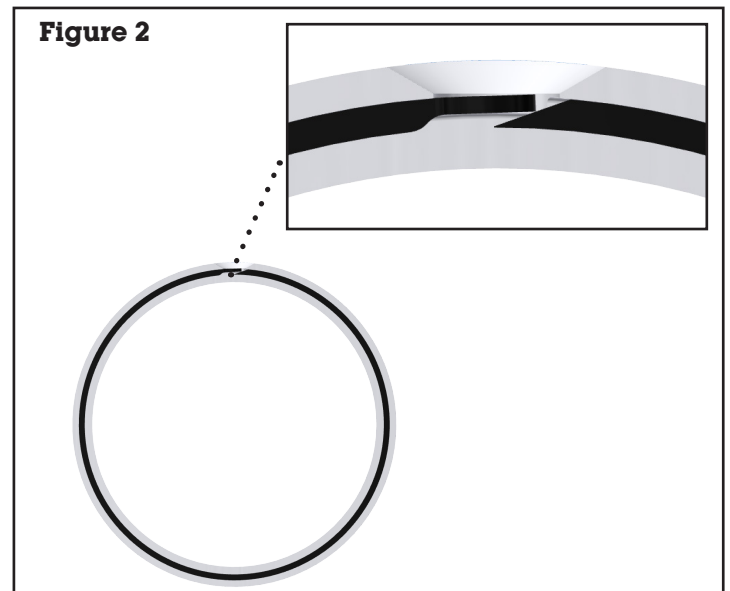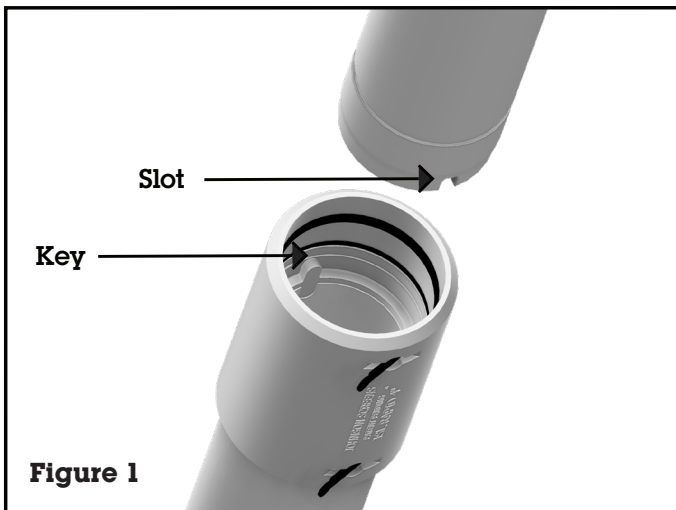

Johnson Screens
Water Well Screens

North and South America
Phone +1 651 636 3900
info.us@johnsonscreens.com

Europe, Middle East & Africa
Phone +3 3 23 75 05 42
info.fr@johnsonscreens.com

Asia Pacific
Phone +61 7 3867 5555
info.au@johnsonscreens.com

johnsonscreens.com